

almando Multiplay Surround Short Manual

Surround Outputs

Both outputs can be used **SIMULTANEOUSLY**.
This means it is also possible for example to drive B&O surround speakers together in combination with a Loewe subwoofer.

- Loewe Audiolink Output (-> Loewe Subwoofer)
- B&O Powerlink Output FRONT L + R
- B&O Powerlink Output REAR L + R
- B&O Powerlink Output SUB (L) + CENTER (R)



Surround Inputs

Only **ONE** device can be connected, either a Loewe TV
OR a B&O TV (or an AV-Receiver with preout).


- B&O Powerlink Input SUB (L) + CENTER (R)
- B&O Powerlink Input REAR L + R
- B&O Powerlink Input FRONT L + R
- Loewe Audiolink Input (-> Loewe TV)



Stereo Inputs

If you start playback on a stereo source,
the sound is converted to **SPEAKER 4**.
In other words, you can hear the sound on
all surround speakers and the subwoofer.

- SPDIF Input, Toslink Jack
- DIP Switches for configuration of the device
- B&O Powerlink Input (e.g. B&O audio)

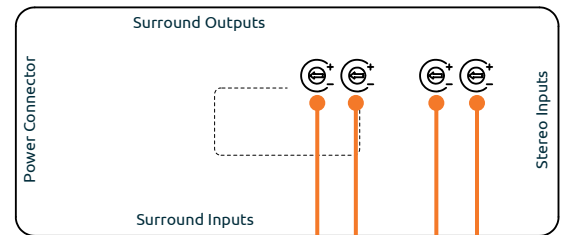

- Level Adjustment Rearspeaker L
- Level Adjustment Rearspeaker R
(valid only for stereo playback, for surround playback the setup must be done in the TV surround menu)

- Level Alignment SPDIF Input L
- Level Alignment SPDIF Input R

DIP Switch	ON (top)	OFF (bottom)
1	AUTOMATIC TURN-ON for Beolab 5 (also with None-B&O devices, e.g. Sonos Connect)	no Beolab 5 connected
2	POWERLINK IN (Stereo) with automatic signal detection for devices without trigger voltage Priority: 1. SPDIF / 2. Powerlink / 3. Surround	POWERLINK IN (Stereo) for devices with trigger voltage (e.g. B&O audio devices) Priority: 1. Powerlink / 2. SPDIF / 3. Surround Also recommended, if no device is connected!
3	Use only, if there is NO device connected to POWERLINK IN (Stereo)	Standard: OFF (bottom)
4	Turn-Off delay 2 minutes (valid only for automatic signal detection)	Turn-Off delay 20 seconds (valid only for automatic signal detection)
5	SURROUND Inputs with automatic signal detection for devices without trigger voltage (e.g. AV-Receiver without trigger output)	SURROUND Inputs for devices with trigger voltage (e.g. B&O TV, Loewe TV, AV-Receiver with trigger output)

